

ZX1200i/ZX1300i/ZX1600i BARCODE PRINTER USER MANUAL



User Manual: ZX1200i series
Version : Rev. 1.0
Issue Date : 2013.12.12
P/N : 920-015111-00

ZX1200i/ZX1300i/ZX1600i USER MANUAL

Barcode Printer

1

1.1	Box Content	001
1.2	Getting to Know Your Printer	002
2	Printer Setup	004
2.1	Loading the label roll	004
2.2	Loading & Removing the Ribbon	800
2.3	Connecting the Printer to the Host Computer	011
2.4	Installing Printer Driver and GoLabel with Super	012
	Wizard CD	
3	Printer Setting and Control	017
3.1	Operation Panel	017
3.2	LCD Interface Introduction	018
3.3	LCD Interface Function	023
3.4	Label Calibration and Self-Test	028
3.5	Error Alerts	030
3.6	USB Host	031
4	NetSetting for Ethernet	034
4.1	Installing the NetSetting Software	034
4.2	The Interface of NetSetting	035
5	Accessories	042
5.1	Preparation Steps	0.40
	· · · · · · · · · · · · · · · · · · ·	042
5.2	Installing the Cutter	042
5.2 6		
	Installing the Cutter	039
6	Installing the Cutter Maintenance and Adjustment	039 046
6 6.1	Installing the Cutter Maintenance and Adjustment Installing / removing the print head module	039 046 046
6 6.1 6.2	Installing the Cutter Maintenance and Adjustment Installing / removing the print head module Adjusting the print line	039 046 046 047
6 6.1 6.2 6.3	Installing the Cutter Maintenance and Adjustment Installing / removing the print head module Adjusting the print line Adjusting ribbon tension	039 046 046 047 48
6 6.1 6.2 6.3 6.4	Installing the Cutter Maintenance and Adjustment Installing / removing the print head module Adjusting the print line Adjusting ribbon tension Cleaning the thermal print head	039 046 046 047 48 49
6 6.1 6.2 6.3 6.4 6.5	Maintenance and Adjustment Installing / removing the print head module Adjusting the print line Adjusting ribbon tension Cleaning the thermal print head Adjusting the balance and print head tension	039 046 046 047 48 49 50

001

Appendix

ZX1200i/ZX1300i/ZX1600i USER MANUAL

FCC COMPLIANCE STATEMENT FOR AMERICAN USERS

This equipment has been tested and found to comply with the limits for a CLASS A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at own expense.

ZX1200i SERIES TO WHICH THIS DECLARATION RELATES IS IN CONFORMITY WITH THE FOLLOWING STANDARDS

European Standard EN 55022:2010/AC:2011 Class A,EN 61000-3-2:2006/A1:2009 and /a2:2009, EN 61000-3-3:2008 and EN55024:2010 (IEC 61000-4-2:2008, IEC 61000-4-3:2006/A1:2007/A2:2010, IEC 61000-4-4:2004/A1:2010, IEC 61000-4-5:2005, IEC 61000-4-6:2008, IEC 61000-4-6:2008, IEC 61000-4-11:2004). CFR 47, Part 15

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

此为Class A产品·在生活环境中·该产品可能造成无线电干扰·在这种情况下·可能需要用户对其干扰采取切实可行的措施。

Declaration

ZX1200i/ZX1300i/ZX1600i USER MANUAL

SAFETY INSTRUCTIONS

Please read the following instructions carefully.

- 1. Keep the equipment away from humidity.
- 2. Before you connect the equipment to the power outlet, please check the voltage of the power source.
- 3. Make sure the printer is off before plugging the power connector into the power jack.
- 4. It is recommended that you connect the printer to a surge protector to prevent possible transient overvoltage damage.
- 5. Be careful not to get liquid on the equipment to avoid electrical shock.
- 6. For safety and warranty reasons, ONLY qualified service personnel should open the equipment.
- 7. Do not repair or adjust energized equipment under any circumstances.

Caution


- * Danger of explosion if battery is incorrectly replaced. Replace only with the equivalent type recommended by the manufacturer.
- ** Dispose of used batteries according to the manufacturer's instructions.
- *** Only use with designated power supply adapter model.
- **** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Specifications are subject to change without notice.

1.1 Box Content

Please check that all of the following items are included with your printer.


• ZX1200i / ZX1300i / ZX1600i Barcode Printer

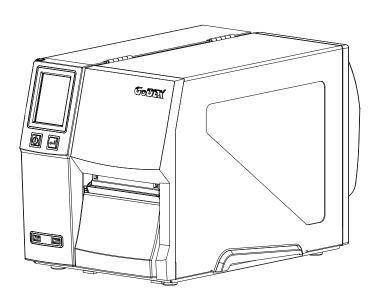

Label Stock




USB Cable

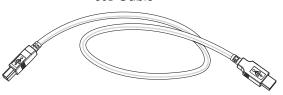

Ribbon




Power AdapterPower Cord

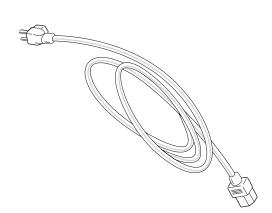

• ZX1200i / ZX1300i / ZX1600i Series Quick Guide



CD

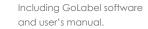




Barcode Printer


1.2 Getting to Know Your Printer

Device Overview

Front View

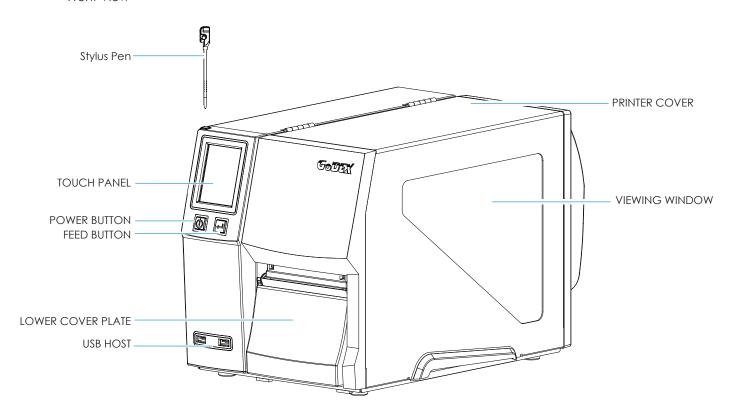



Rear View

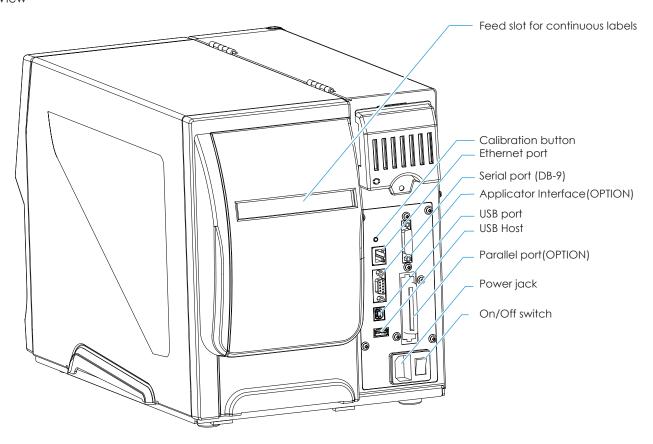

Barcode Printer

The Internal View of Printer

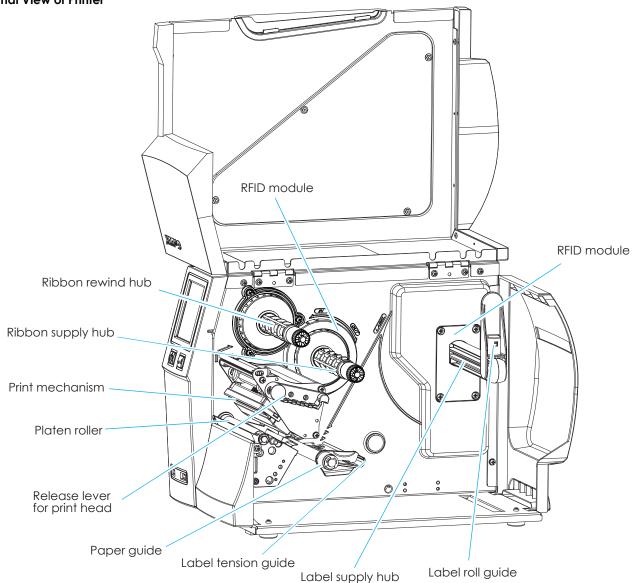

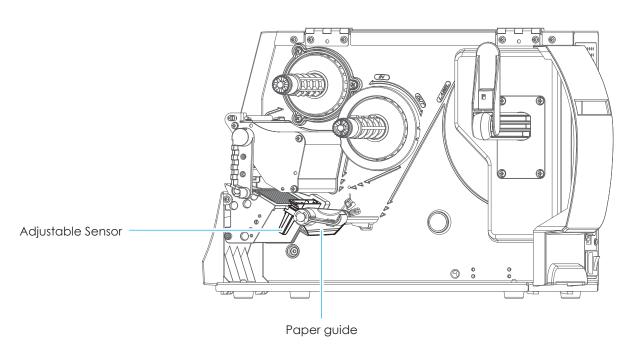


2.1 Loading the label roll

This printer supports the following printing methods:


Thermal transfer printing (TTP): Requires a ribbon for transferring a printed image to a medium.

Direct thermal printing (DTP): Does not require a ribbon, only thermal paper.

Please check which printing method you are using and alter the settings accordingly in the printer driver, printer menu, and/or software.

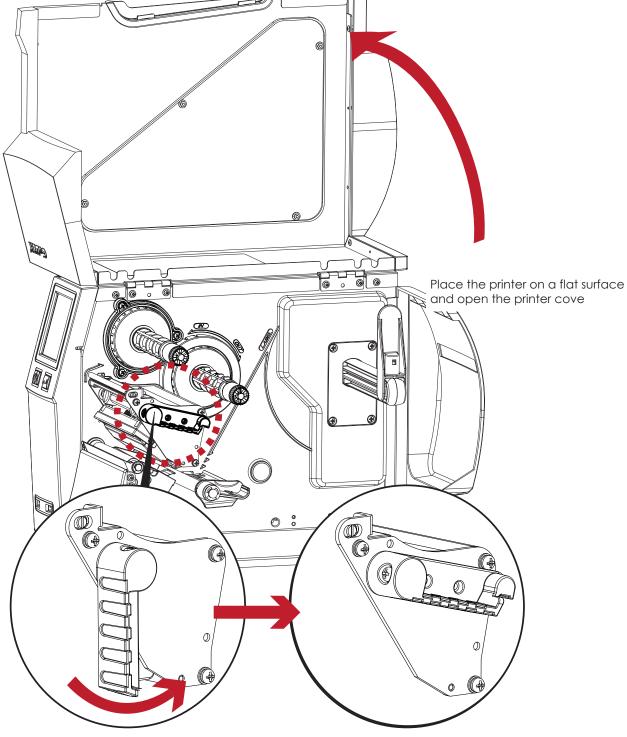


Turn it anticlockwise to a top right position as shown in the illustration

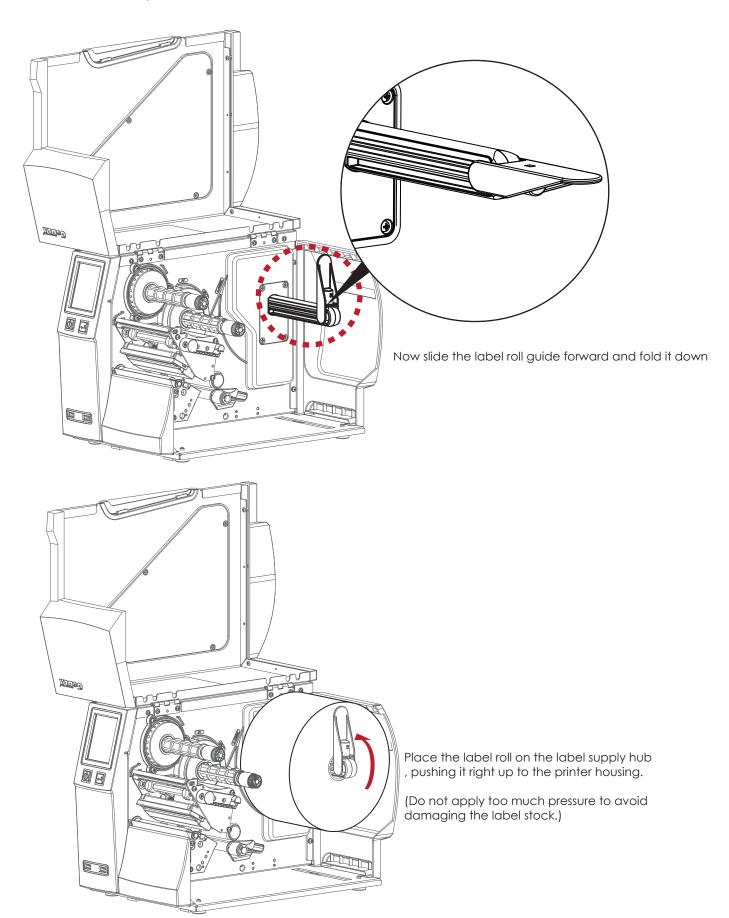


Note

^{*} When moving the label roll guide, hold it only by the end that is attached to the bracket, not by its top.

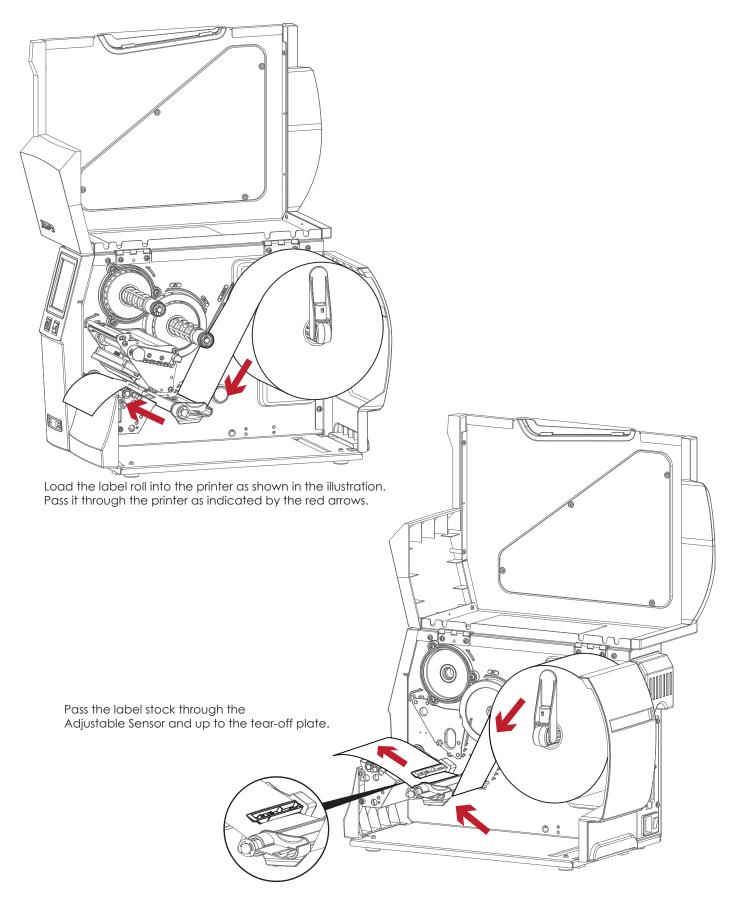

Note


^{*} Remember to set the movable sensor to gap, black mark, or tag hole by changing the position of the sensor with the adjustment wheel.

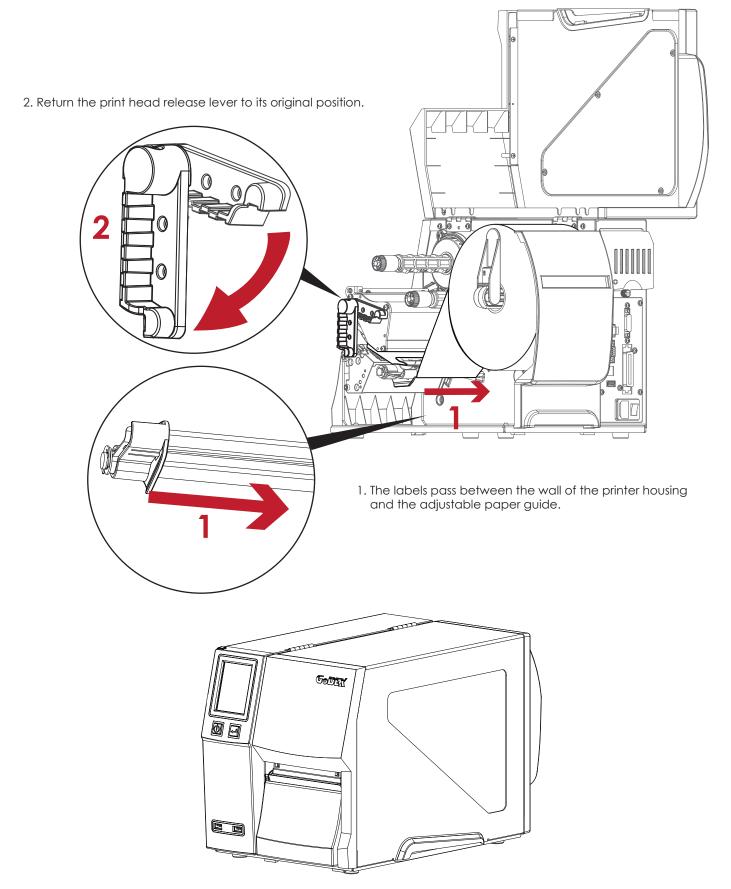

Then close the printer cover.


2.2 Loading & Removing the Ribbon

Loading Ribbon

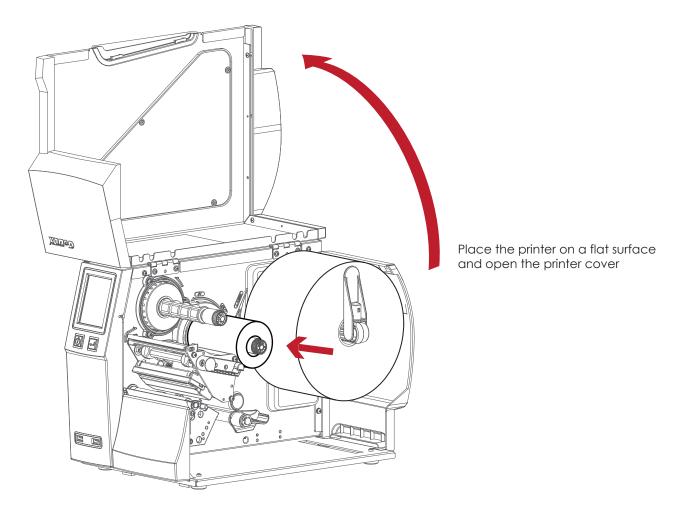


Place a new ribbon on the ribbon supply hub.

The two illustrations as below show you how to install the ribbon depending on the ribbon type (ink side in or out).

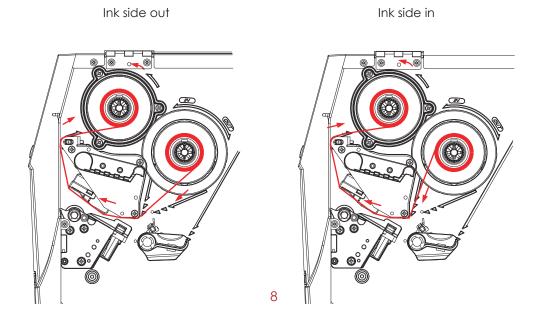

Pass the ribbon under the print head and back up on the other side. Attach it to the empty ribbon core.

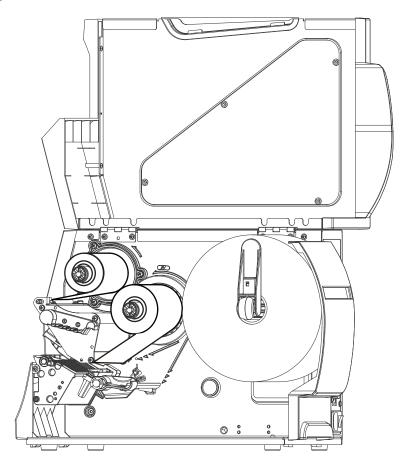


Note

^{*} Do not pass the ribbon under the sensor.

2.3 Connecting the Printer to the Host Computer


- 1. Please make sure that the printer is switched off.
- 2. Connect the power cord to the AC adapter and connect the adapter to the printer.
- 3. Connect the USB cable to the printer and host computer.

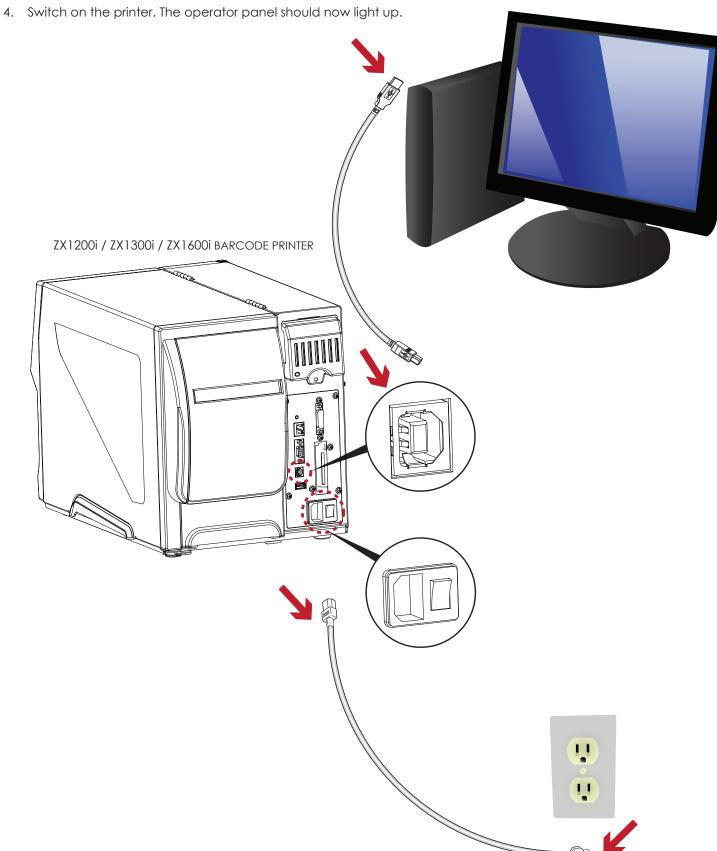

2.4 Installing Printer Driver and GoLabel with Super Wizard CD

1. Insert the Super Wizard CD in the CD/DVD drive of the host computer and the program should pop up automatically.

You will see the Welcome screen first. On the Welcome screen, choose "Standard Installation".

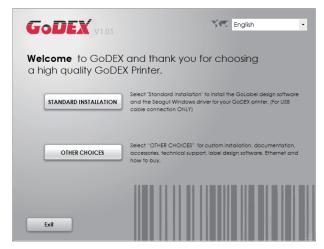


2. The wizard will then ask you to make sure your USB and power cables are connected and that the power is turned on. Make sure that is done and then click "Next".



3. The next screen you will see to choose "Download the latest version from GoDEX server" or "Install from this product disc.



4. As the printer driver and GoLabel are installing, a screen will display a progress bar.

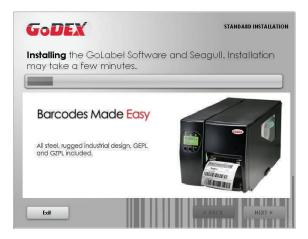

5. Once the installation is complete, you can start to make and print labels with GoLabel or through the printer driver.



6. As the optional steps, you can also print a test label or register your printer during the "Standard Installation" procedure.





Note

^{*} If you need more resources, tools or reference documents, you can also find them on Super Wizard CD. Just click "Other Choices" on Welcome Screen to access the files.

Installing Printer Driver Directly from CD Folder

1. Insert the product CD in the CD/DVD drive of the host computer and open the "Seagull Drivers" folder on the CD. Select the icon for the driver file and click it to start the installation.




2. Follow the instructions on the screen. The Driver Wizard guides you through the installation procedure. Select "Install printer drivers".



3. Specify your printer model.



4. Specify the port used to connect the printer to the host computer.

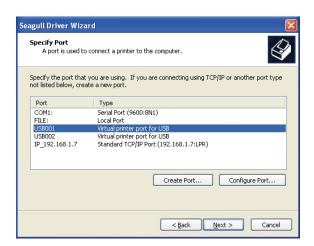


5. Enter a printer name and assign the appropriate rights.




6. Once the installation is complete, a summary of the printer settings is displayed.

Check whether the printer settings are correct and click "Finish" to start copying the driver files.


Wait until copying is complete, then finish the installation.

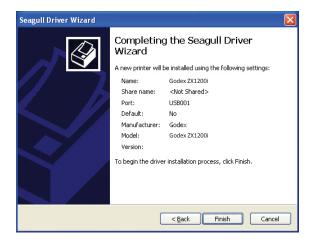

7. Once the driver installation is complete, the new printer should appear in the "Printers and Faxes" folder.

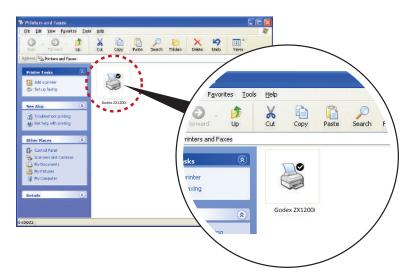

3.1 Operation Panel

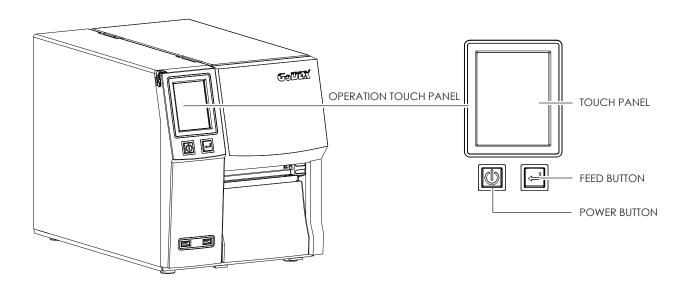

POWER Button

Press the POWER button to turn on the printer, and the START UP SCREEN appears. The printer is on "ready to print" status, the LCD screen should display the message "READY" on the screen.

When printer is turned on, hold and press down the POWER button for 3 second will turn the printer off.

FEED Button

Turn on the printer and press the FEED button.

When you press the FEED button, the printer will advance media until the FEED button is released.

If you are using continuous labels, pressing the FEED button will advance a length of media until the button is released. If you are using media with gaps, pressing the FEED button once will advance only one label.

If the label does not stop at the correct position, you need to run the auto-detection function for your media, please see Section 3.4 Label Calibration and Self-Test.

PAUSE PRINTING FEED Button

Pressing the FEED button while the printer is in standby mode will set the printer to pause mode. In this mode, the printer can receive commands, but it will only process them when it is reset to standby mode. Pressing the FEED button again will reset the printer to standby mode.

Pressing the FEED button during printing will interrupt printing. When the FEED button is pressed again, the printer resumes printing. Example: While a 10-label print job is running, you press the FEED button to pause the printer. Two of the labels have been printed. To resume printing and print the remaining eight labels, you will need to press the FEED button again.

CANCEL PRINTING_FEED Button

Press and hold the FEED button for 3 seconds during printing cancels a print job. The current print job is cancelled. Example: While a 10-label print job is running, you press the FEED button. Two of the labels have been printed. The print job is cancelled and the remaining eight labels will not be printed.


3.2 LCD Interface Introduction

Getting Started


Press the POWER button to turn on the printer, and the START UP SCREEN appears.



If the printer is on "ready to print" status, the LCD screen should display the message "Ready" on the screen. Use touch gestures to get around the Home screen and other screen for setting.

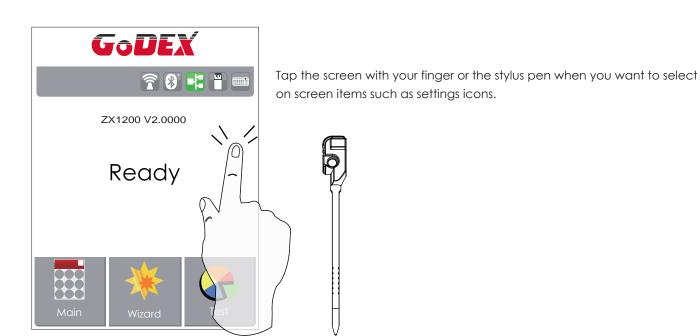


On the Ready Page, three function mode for setting. You can make various setting functions in FUNCTIONAL MODE.

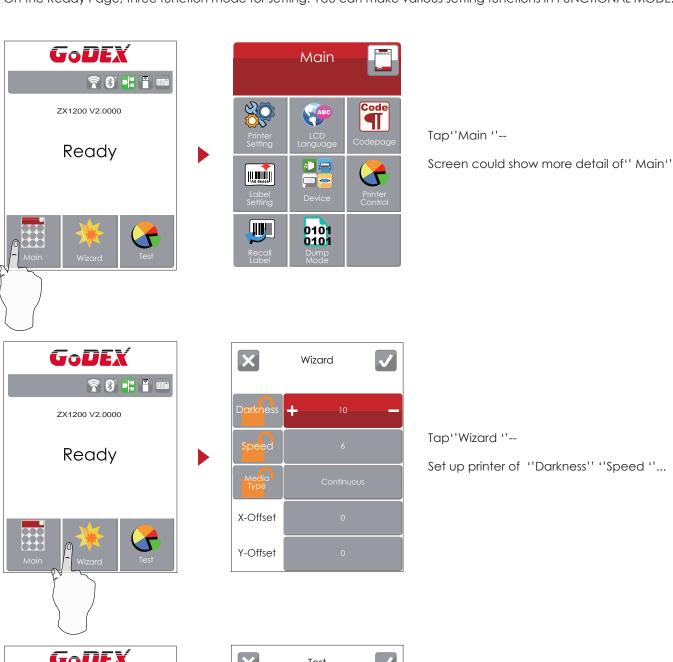






Tap''Test ''-self-Test page and Out of Dump Mode for setting.

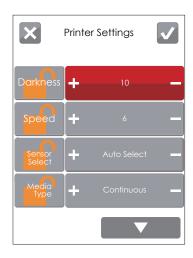

finish setting tap
back to main page if
do not save, tap
system would not save
any changes.



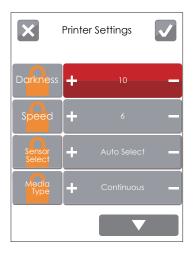




If printer functions locked, printer can not receive any commands from GoLabel or any devices.

Keyboard Mode

When plug-in an USB keyboard to the printer, LCD touch panel will display "Enter Standalone", press the "Y" key on keyboard to entering to the dialog for "Keyboard Mode" operation.

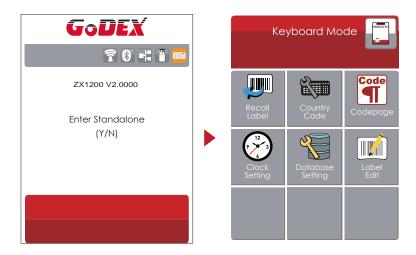


Preview Label function


User can choose any labels which have done in the printer and preview it. (See Instuctions)

From the Home screen, tap to Main Page.

From the Main Page tap Recall Laboration

From the Main Page tap Recall Label to Recall Label Page.

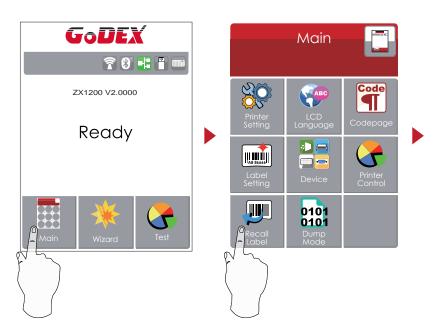

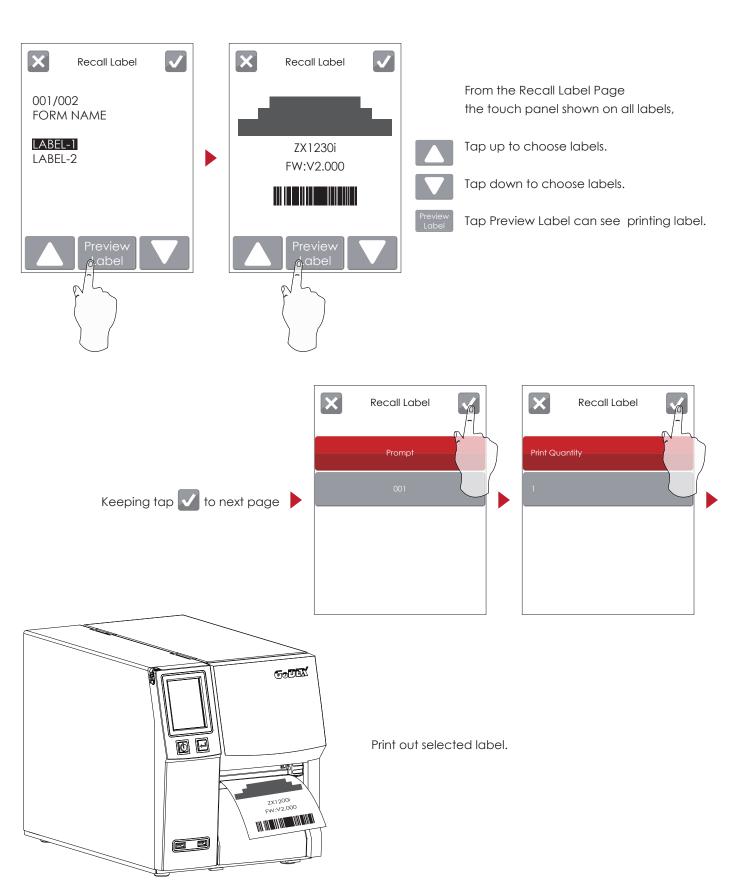


Note

* Using recall label function send commands, printer display must be back to Ready Page.



3.3 LCD Interface Function

Main Page

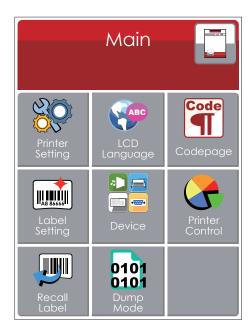



Setting items for printer, ex. Printing speed, darkness. Also includes a Printing Wizard for your ease of printing.



More than 10 languages for printer setting



It consists of a table of values that describes the character set for a particular language



Setting items for printing label, ex. Rotation, Printing position offset.



Option modules and connection port settings.



Self-Diagnose functions for printer, ex. TPH testing, self-test page printing.



Recall Label



Dump Mode

Device Page





Setting off or on for buzzer



Setting items for options, ex. Cutter, Label Dispenser, Applicator



Choose ON. Printing labels would be back to start position.



Setting items for Serial Port, ex. Baud Rate, Parity, Data Bits, Stop Bits.



Setting items for LAN, ex. Port NO., DHCP, Dynamic IP, Default Gateway, Subnet Mask.




Setting items for LCD, ex. Brightness, Contrast, Power Saving, Password



Setting items for Clock, ex. Year, Month, Day, Hour, Minute

Setting Items in Setting Mode

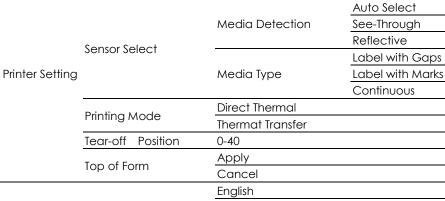


0-19

2-5

Darkness

Speed



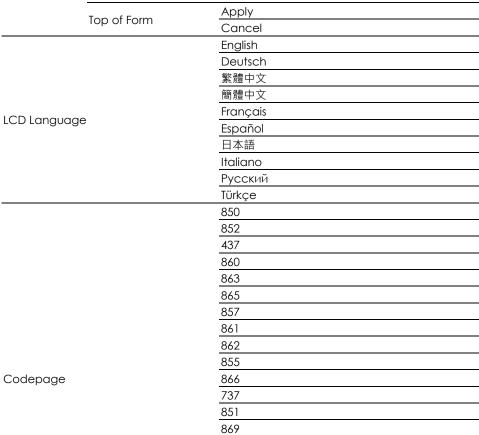

Win 1252 Win 1250 Win 1251 Win 1253







	Buzzer	OFF ON		
		None		
		Cutter		
	Optional Setting	Label Dispenser		
		Applicator		
		Off		
	Smart Backfeed	On		
			4800 bps	
			9600 bps	
			19200 bps	
		Baud Rate	38400 bps	
			57600 bps	
			115200 bps	
	Serial Port Setting		Non	
	· ·	Parity	Odd	
		·	Even	
Device		D - 1 - 1-11-	7 bits	
		Data bits	8 bits	
		Stop hits	1 bits	
		Stop bits	2 bits	
		DHCP	On	
	LAN Setting	IP Address	0.0.0.0	
	LVIA 201111Â	Subnet Mask	255.255.255.0	
		Gatway	192.168.0.254	
		Brightness	5	
	LCD Setting	Contrast	5	
	LCD 3eming	Power Saving	15	
		Password	OFF	
		Year		
		Month		
	Clock Setting	day		
		Hour		
		Minute		
		Test		
		Sample Pattern		
Printer Control		Select Memory		
		Clear Memory		
		Calibration		
		Reset to Default	2.5 or 7	
		Darkness	2-5 or 7	
		Speed	0-19	
Wizard		Media Type	Label with Gaps Label with Marks	
TTIZUIU		Media Type	Continuous	
		X-Offset	COLINITIOOOS	
		Y-Offset		
			Enable	
		Clear Bind	Disable	
			Enable	
		Make Device Visible	Disable	
Bluetooth			Enable	
		SSP	Disable	
		PIN Code	0000	
		Search Devices		
	Self-Test page	3001011 2011003		
Test	Out of Dump Mode			












Status of LCD Interface

When printer is on standby status (ready to print), the LCD interface will display "Ready" on screen. You can only print when you see the "Ready" status.



If there is any printers error, the LCD screen will display the error screen to show the type of error. You can fix the error according the notice.

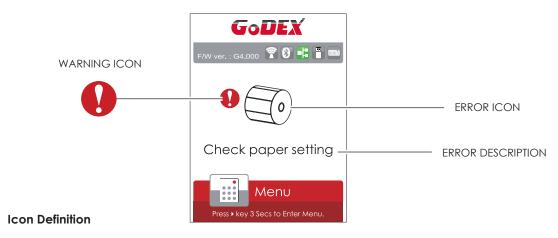

	To upper level	Appears on the NAVIGATION ICON of Setting Pages. It guides you back to upper level by touching display upper right icon.
	To main page	Appears on the NAVIGATION ICON of Setting Value Pages. It guides you back to main page by touching display upper left icon.
A	Lock	On Setting Value pages, touch display icons to lock the value for preventing unexpected change.
	Unlock	Touch display icons again to unlock the value.

3.4 Label Calibration and Self Test

Label Calibration

The printer can automatically detect and store label height.


That means the host computer does not need to transmit the label height to the printer.

Self Test

Self-test function lets you check whether the printer is functioning normally. Here is how you run the label size calibration and self test.


- 1. Check that the label stock is loaded correctly.
- 2. Turn off the printer.
- 3. Turn the printer on again, keeping the FEED button pressed. When the LED starts to flash red, release the FEED button. The printer will now measure the label stock and store the label height.
- 4. Once the printer has successfully measured the label stock, it will print a self-test label.

The contents of a self-test printout are listed below.

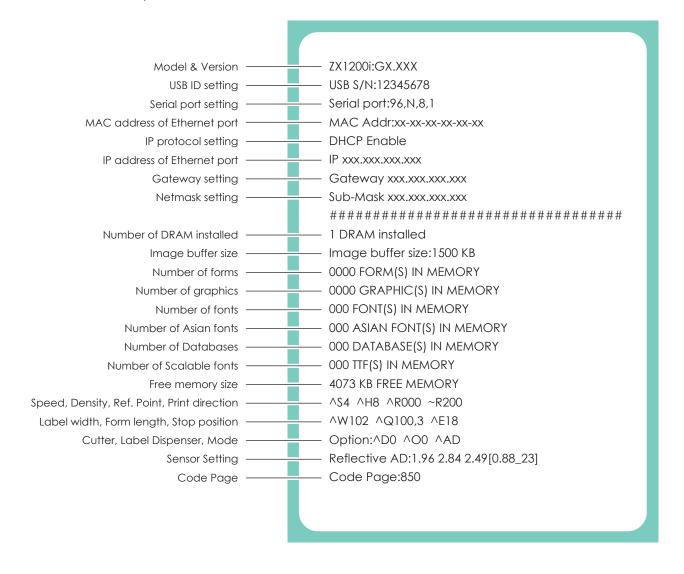


Label Calibration Button

A hardware button to make a Label Calibration while printer encountering ''Media Error'' during the cases when first-time printer start up or change label or ribbon to another type, such as change using gap label to continuous or black mark labels.

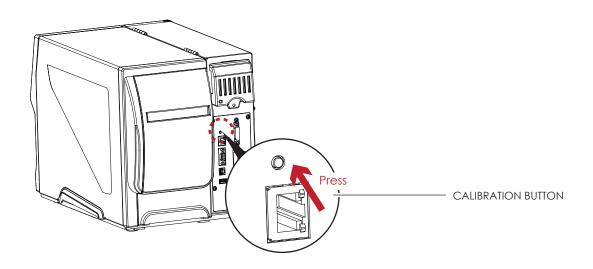

Press C-button for 2 seconds, it will make an auto-sensing to calibrate the label and ribbon's parameters.

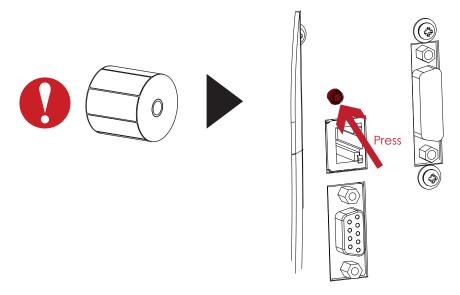


Note

^{*} Press C-button is equivalent to the auto-sensing command ''~S,SENSOR'' that will cancel on-printing-job and make the Label Calibration immediately.

3.5 Error Alerts

In the event of a problem that prevents normal functioning of the printer, you will see an error message on LCD screen and hear some beep signals. Please refer to below table for the error alerts.

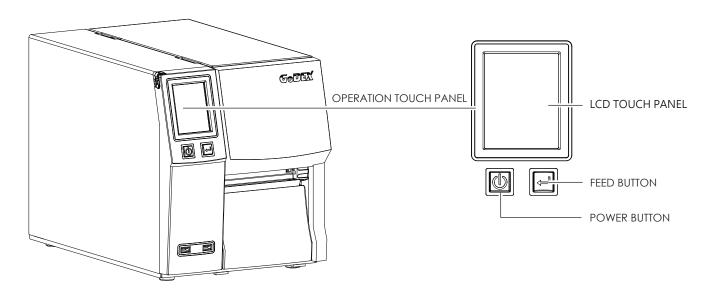

Operation Panel
Status

GoDEX
F/W ver. : G4.000 🛜 🐧 📑
•
TPH opened
Menu Press • key 3 Secs to Enter Menu.

GoDEX		
F/W ver. : G4.000 🛜 🕽 📫 🛗 🔤		
О ТРН		
TPH overheat		
Menu Press • key 3 Secs to Enter Menu.		



Туре	Beeps	Description	Solution
Print Head Error	2 x 4 beeps	The printing mechanism is not correctly closed.	Open the print mechanism and close it again.
Print Head Error	None	High temperature at the print head.	Once the print head has cooled down, the printer switches to standby mode.
Media Error	2 x 3 beeps -	No ribbon is installed and the printer displays an error.	Make sure that the printer is set to direct thermal printing mode.
Media Ellol		The ribbon is finished or the label supply hub is not moving.	Replace the ribbon roll.

Operation Panel	Satus	Beeps	Description	Solution
Operation Panel Status	30103	neehs	Description	Make sure that
F/W ver G4.000 TO		2 x 2 beeps	No paper is detected.	the label sensor is positioned correctly. If the sensor still does not detect the paper, run the autodetection function again.
Check paper setting			Paper is finished.	Replace the label roll.
Menu Press > key 3 Secs to Enter Menu.	Media Error		Printer feed problem.	Possible reasons: the print medium has become trapped around the rubber roll; the sensor cannot detect a gap or black mark between the labels; there is no paper. Please reset the sensor.
Memory full Press > key 3 Secs to Enfer Menu.	File Error	2 x 2 beeps	The memory is full. The printer prints the message "File System full".	Delete unnecessary data or install additional memory.
File name can't be found Menu Press - key 3 Secs to Enter Menu.			Unable to find file. The printer prints the message "File Name not found"	Use the "~X4" command to print all files. Then check whether the files exist and whether the names are correct.
File name duplicated Menu Press * key 3 Secs to Enter Menu.			A file of the same name already exists. The printer prints the message "Duplicate Name".	Change the name of the file and try storing it again.

3.6 USB Host


Definition: USB Host port supports either device: USB memory stick, keyboard or scanner.

Purpose

- USB memory stick: It extends the user memory space up to 32GB for Graphic, Font, Label Format, DBF and Command files downloading. The printer's Firmware also can be updating if copy new version of Firmware into USB memory stick.
- Connecting an USB keyboard to printer for "Keyboard Mode" mode operation.
- Plug-in an USB scanner to operate the printer in "Keyboard Mode".

Usage of Extended Memory

- USB memory stick: It supports hot-plugging function; printer will create a Folder ''\LABELDIR'' and switch ''User Flash'' to '' Extended Memory'' automatically while user plugs an USB memory stick into a GoDEX printer.
- Connect the USB Stick plugged -in printer to PC via USB Device or Ethernet port and run ''GoLabel'' software to download Graphic, Font, Label Format, DBF and Command files to the printer.
- Detail download procedures, please refer to "GoLabel On-line Help".

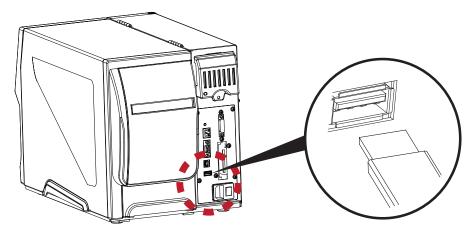

Usage of Firmware Update

- Remove USB memory stick from printer and plug-in it to a PC's USB port; delete Firmware ''*.bin'' file from
 ''\LABELDIR\FW'' of USB memory stick if it existing; or create a Folder ''\LABELDIR\FW'' to USB memory stick if it doesn't existing.
- Copy a new version of Firmware "xxxx.bin" to the Folder "LABELDIR\FW"; and then remove USB and plug-in back to the printer that going to update Firmware.
- The printer will update the Firmware automatically when plug-it-into the printer and printer find-out the Firmware in ''\LABELDIR\FW'' is newer version.
- Don't remove the USB memory stick out while it's under updating with ''Flash Writing...''message that displays on LCD panel.

USB Keyboard

- When plug-in an USB keyboard to the printer, LCD touch panel will display "Enter Standalone", press the
 "Y" key on keyboard to entering to the dialog for "Keyboard Mode" operation.
- Here have six sub-dialogs "Recall Label" "Country Code" "Code Page" "Clock Setting" "Database Setting"
 "Label Edit" is able operating by keyboard as follow definition:
 - 1. Press "ESC" key to exist from "Keyboard Mode" or back to previous dialog
 - 2. Press "F1", it will let the printer from "Home Page" mode entering into "Keyboard Mode"
 - 3. Press "Enter", "Arrow" and "Alphabetic" keys as the usual in PC that will perform the key-in function of "Keyboard Mode".

Scanner

- When plug-in an USB scanner to the printer, LCD touch panel will display "Enter Standalone", tap the "Y" to
 entering the dialog of "Keyboard Mode" operation.
- Scanner is using in "Keyboard Mode" to scanning the "Serial Number, Variable" and Print Quantity while the printer prompts a message on LCD touch panel and wait for data input.


Note

- * The USB Host port on GoDEX printer is without "'HUB" function.
- * The USB Memory Stick supports with "FAT32" Disk Format and up to 32GB only. The certified venders are Transcend, Apacer, Patriot, Consair and Kingston.
- * The download function for Graphic, Font, Label Format, DBF and Command files is operated by GoLabel of PC and must go through the a ''i'' ''x'' model printer itself.
- * On a PC, user may copy entire folder''\LABELDIR'' from USB memory stick to PC or vice-versa. Copy a sub-folder or individual file in ''\LABELDIR'' to PC or vice-versa is not supported.


4.1 Installing the NetSetting software

The NetSetting software is used to manage the network configurations when connecting the printer via Ethernet port. It is available on product CD or can be downloaded from official website. To install the NetSetting, please follow below steps.

- 1. Insert the product CD in the CD/DVD drive of the host computer and open the "Ethernet" folder on the CD.
- 2. Select the icon for the NetSetting installation file and click it to start the installation.

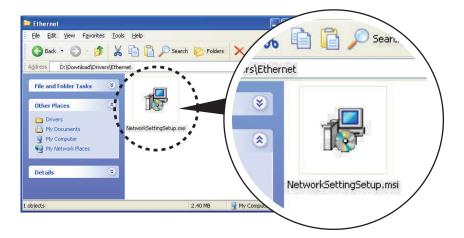

- 3. Follow the instructions on the screen. The Setup Wizard guides you through the installation procedure.
- 4. Specify the "Installation Folder".

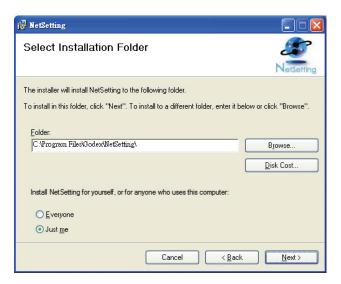

- 5. Click "Next" to start the installation.
- 6. Once the installation is completed; you will see the NetSetting icon on your desktop.



4.2 The Interface of NetSetting

Click the NetSetting icon to start the program; you will see the start page as below. The start page will display the basic information of connected printer and your PC.



Click the magnifier icon to search the Godex printers which are connected via Ethernet port in you network environment. Once a connected Godex printer is detected, it will be listed on the start page.




There are six tabs on the top of interface which can configure different types of network settings. But for the data security reason, you need correct password to enter the configuration pages.

Notice

* The default password is "1111", you can change the password later from the "IP Setting" tab.

IP Setting

The IP Setting tab can change the printer name, Port number, Gateway setting and the password for configuring the printer. You can also set the printer's IP address ether by DHCP or by Static IP.

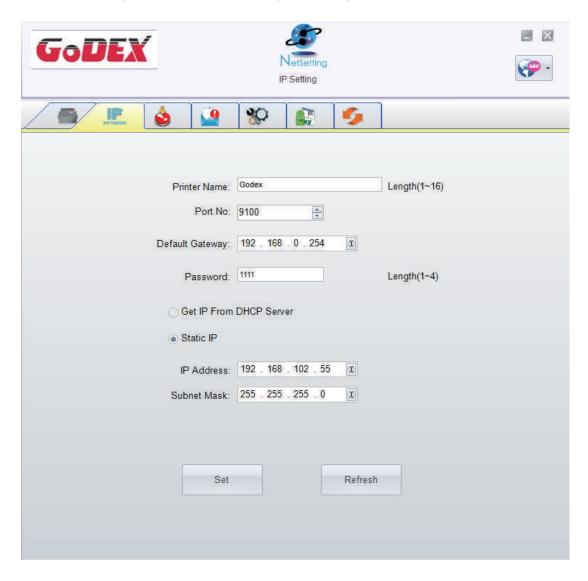

You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

Notice

^{*} To fully benefit from the NetSetting software, you should be familiar with basic networking principles. Please contact your network administrator for related network setting information.

Alert Path Setting

NetSetting will send the alert messages to designated mail account when the error happened on printer. The alert messages are sent by SMTP (Simple Mail Transfer Protocol) or SNMP (Simple Network Management Protocol). You can set or change the configurations of SMTP and SNMP on this "Alert Path Setting" tab.



You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

Alert Message Setting

For the alert message notification function, you can decide which error cases need to be sent out to the operator. Moreover, the alert messages can be set to be sent by SMTP, SNMP or both.



You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

Printer Configuration

Set or change the configurations of connected printer. Most of key settings for the printer operation can be done by this setting page.



You can press "Set" button to apply the settings and "ReGet" button to refresh the setting values.

User Command

The "User Command" tab provides a communication interface for operator to control the printer. Input printer commands in "Input Command" window and press "Send Command" button, the commands will be sent to the printer.


For some commands that will return response message, the message will be displayed in "Output Message" window.



You can press "Send Command" button to send printer commands via Ethernet port and control the printer remotely.

Firmware Download

On "Firmware Download" tab, the current version of printer firmware will be showed on the screen. If you need to update the printer firmware, just specify the file location of firmware file and press "Start Download Firmware" button. The printer firmware then can be updated remotely.

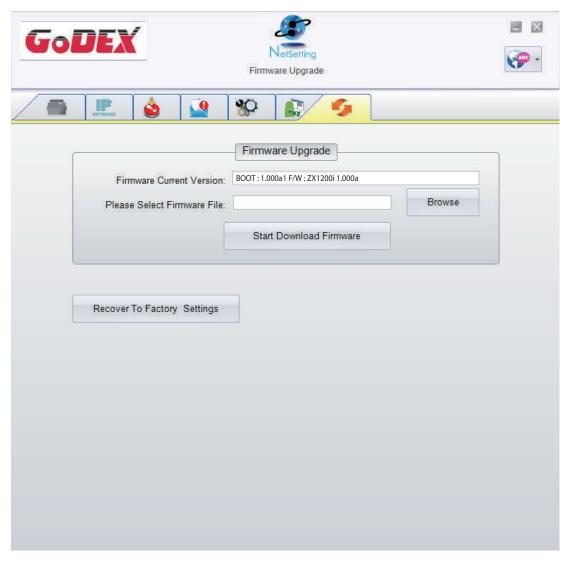


In addition to the firmware update, you can press "Recover To Factory Settings" button to restore the printer configurations back to factory default.

5.1 Preparation Steps

Before installing the optional modules, please make some preparations as follows.

- Turn off the printer:
 Remember to switch off the printer before installing any module.
- 2. Open the printer cover

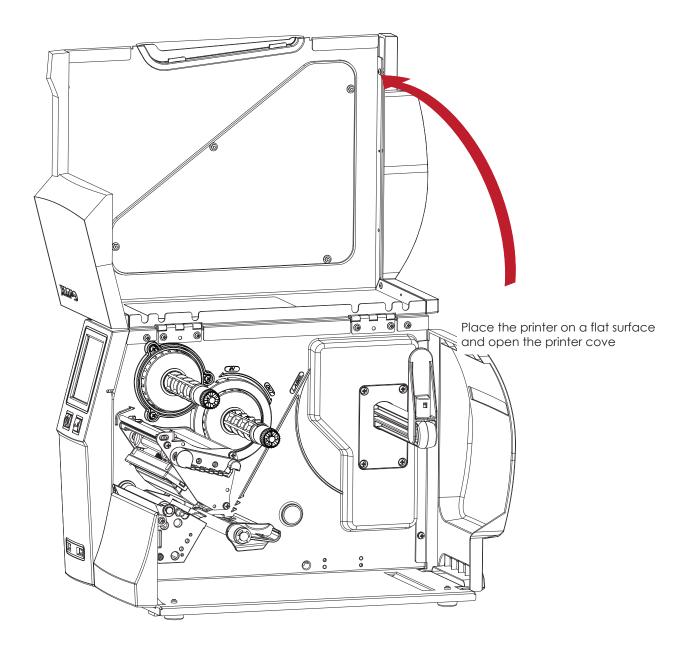


Notice

- * Remember to switch off the printer before installing the cutter.
- ** Do not use to cut adhesive labels! Glue residue will be left on the cutter blade and impair its functioning.
- *** Under the ordinary paper application condition, the cutter performs 300000 cuts of a heavy paper with up to 250 µm thick or 100000 cuts of a plastic sheet with up to 300 µm thick.


5.2 Installing the Cutter


The Overview of the Cutter

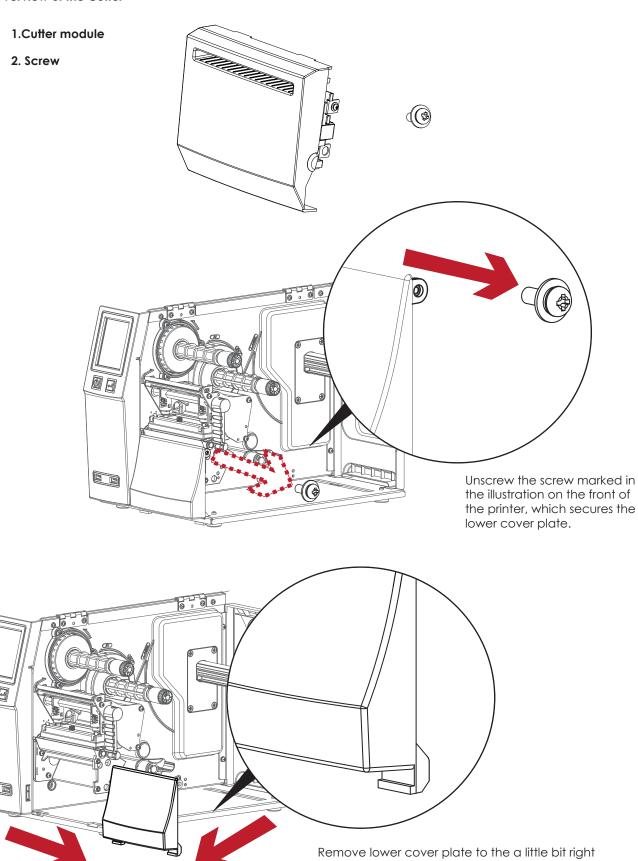


2

then can get out.

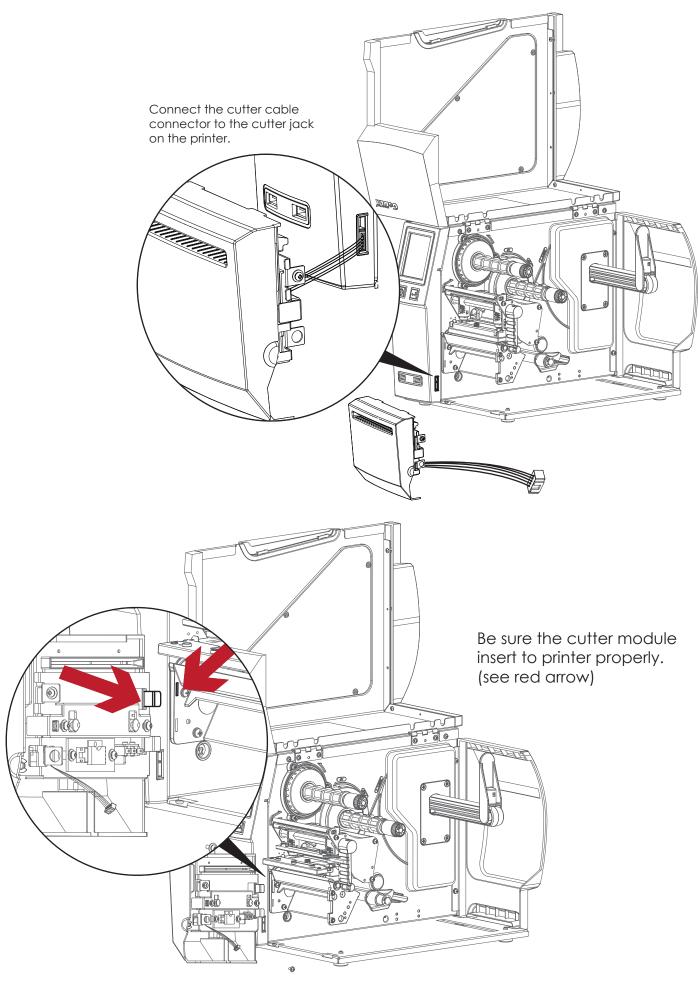

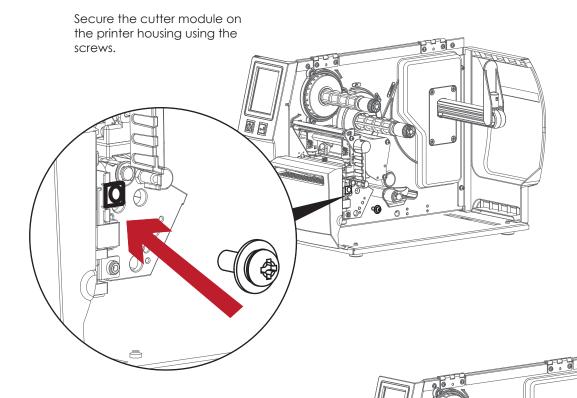

Finish the cutter module installed.

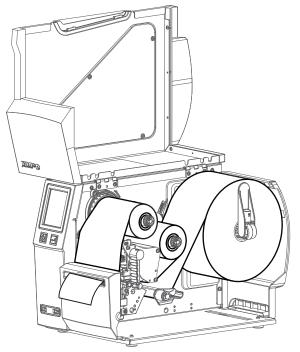


Now load the label roll into the printer and close the printer cover.

Notice


- * Check whether the cutter function is enabled in the printer.
- ** Labels or paper should be at least 30 mm high.
- *** After installation of the cutter module, set the stop position ($^{\triangle}$) to 30.


5.2 Option Rewind Ribbon Hub Removing Ribbon

Use tool to cut off the ribbon.

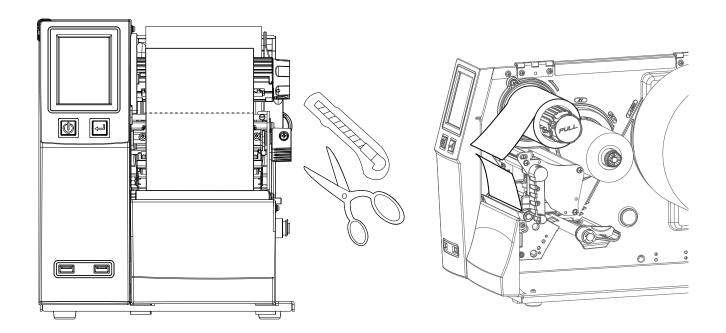


Pull open the knob, ribbon could be easy to remove.

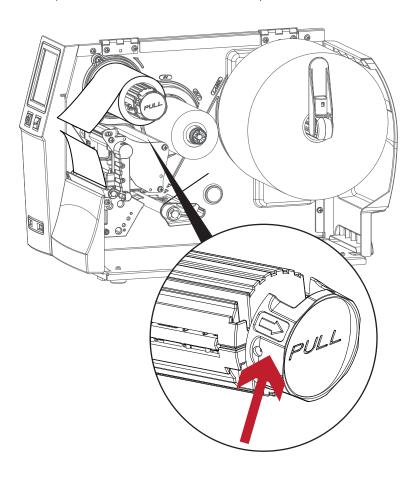


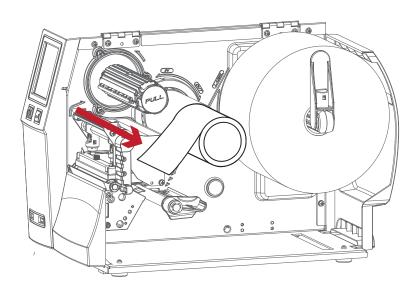


6.1 Installing / removing the print head module

Open the printer cover.

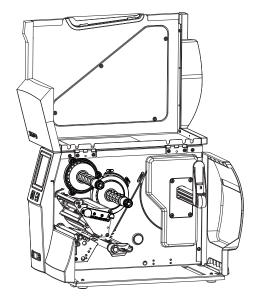


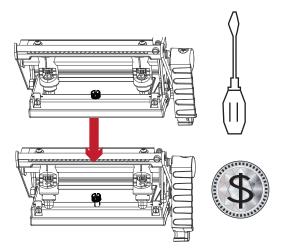

using a screwdriver or a coin, loosen the screw to take out the TPH module.

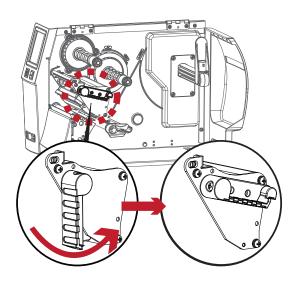

Turn the print head counterclockwise to a top right position

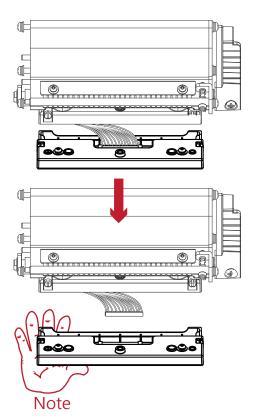



Hold the print head module , pull out the TPH cable smoothly. To install TPH module, follow the reverse order.

^{*} Remember to switch off the printer before removing the print head module.


6.2 Adjusting the print line

Open the printer cover.

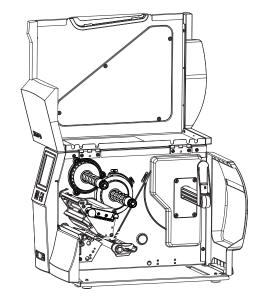


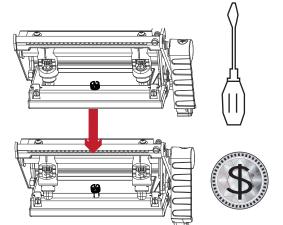

using a screwdriver or a coin to loosen the screw

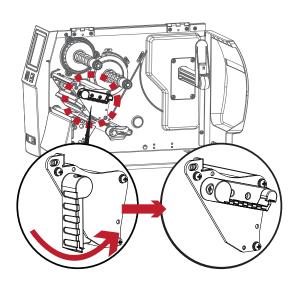

Turn the print head counterclockwise to a top right position

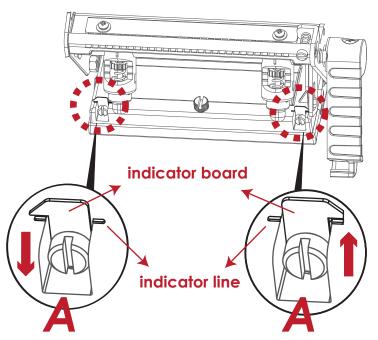

If no improvement is visible, turn the screws(A) clockwise or counterclockwise as far as possible and be sure to align with the indicator board and indicator line.

Repeat the adjustment process until printing quality has improved.



6.3 Adjusting ribbon tension

You can adjust the ribbon tension by turning the ribbon shaft knob (see illustration) clockwise or counterclockwise. There are 4 possible settings, which is marked on the ribbon supply hub.


#1: Tension is the highest

4: Tension is the lowest

If the tension is so low that the ribbon does not move forward, you need to reduce the tension of the ribbon supply hub. To set the tension, press in the knob and turn it clockwise or counterclockwise as required.

Increasing the tension of the ribbon rewind hub will remove any wrinkling of the ribbon during printing, which results from the use of different ribbon materials. (For details about the wrinkling/creasing of ribbons, see Section 6-6.)

If you are using a very narrow ribbon, the printer may not move the label stock forward (particularly with a ribbon that is less than 2" wide). In that case, reduce the tension by turning the knob of the ribbon supply hub counterclockwise.

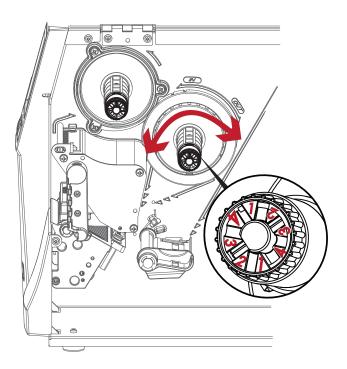


6.4 Cleaning the thermal print head

Dirt on the print head or ribbon may result in inadequate print quality (there are only partial images on the label). The printer cover should therefore be kept closed when possible.

Keeping dirt and dust away from the paper or labels ensures a good print quality and a longer lifespan of the print head. Here is how you clean the print head:

- 1. Switch off the printer.
- 2. Open the printer cover.
- 3. Remove the ribbon.
- 4. Release the print head by turning the print head release lever.
- 5. To remove any label residue or other dirt from the print head (see Red arrow), please use a soft lint-free cloth dipped in alcohol to wipe.

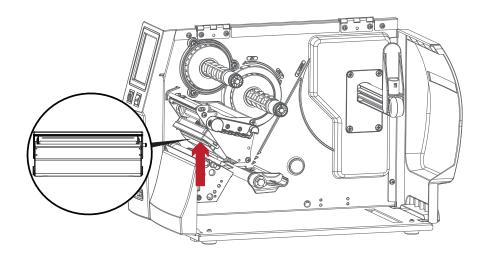


Note


^{*} The print head should be cleaned once a week.

^{**}Please make sure that there are no metal fragments or other hard particles on the soft cloth used to clean the print head.

6.5 Adjusting the balance and print head tension

Open the printer cover.

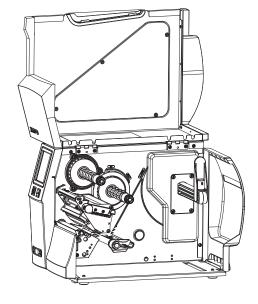

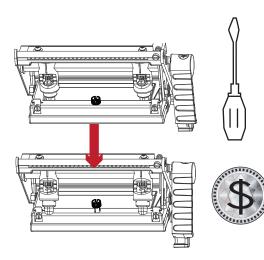



using a screwdriver or a coin to loosen the screw

When using a variety of label stock and ribbons, the ink may not be evenly distributed. If there is no printed image on one side of the paper, or the ribbon wrinkles, the print head pressure must be readjusted using the TPH spring boxes.

Move the TPH spring boxes as shown in the illustration to change the print head pressure.

The wider the label you are using, the further apart the TPH spring boxes must be moved away from each other. If there is no quality improvement, you need to change the pressure on the TPH spring boxes.

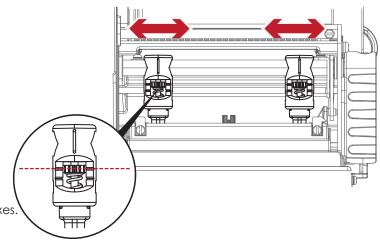

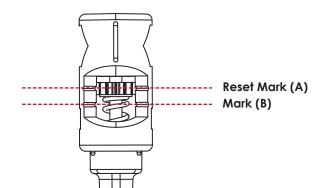

Turning the screw left increases the pressure, while turning it right reduces the pressure.

Be sure not to turn the screw so that it goes below Mark(B).

6 Maintena

Maintenance and Adjustment

6.6 Ribbon shield settings


The use of different ribbon materials may cause wrinkling of the ribbon, which in turn affects the print result as illustrated by the examples in (a) and (b). To change the print quality, you can adjust the ribbon shield screws. If your print result looks like the example in (a), you need to turn ribbon shield screw clockwise.

If your print result looks like the example in (b), you need to turn ribbon shield screw counterclockwise.






To keep track of the change in print quality, you should adjust the screws by half a turn at a time. Print a test page. If there is no improvement in the print result, turn the screw by another half turn. Do not turn the adjustment screw more than two full turns (360°).

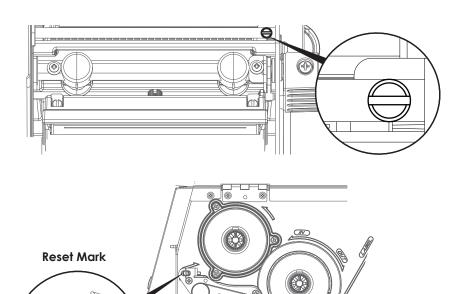




^{*} If you adjust the screw by more than two full turns, the paper feed may no longer function correctly. In that case, unscrew the ribbon shield screws to align the reset mark and restart the adjustment process.

6.7 Cutter settings

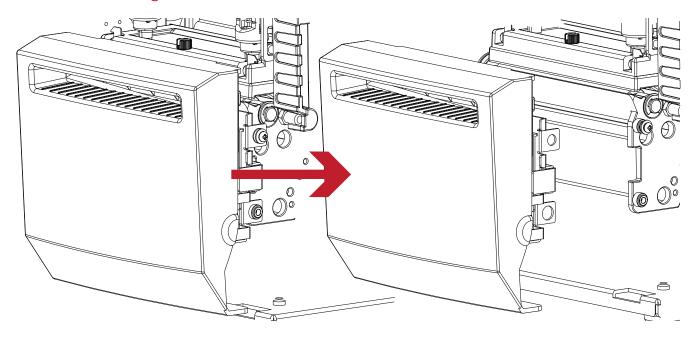

Switch off the printer before removing the CUTTER.

(remove or install cutter refer to "accessories" in Section 5)

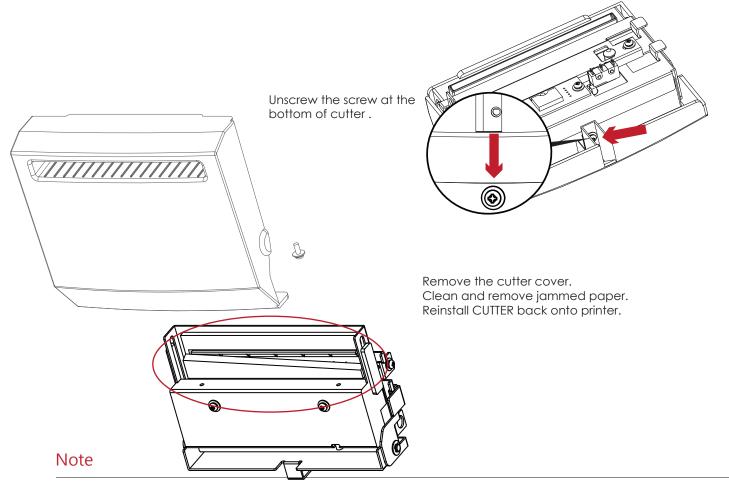

^{*} Remember to switch off the printer before removing the CUTTER.

^{**}The label medium should be at least 30 mm long to ensure correct functioning of the cutter.



6.8 Troubleshooting

Problem	Solution
The printer is switched on but the LED does not light up.	♦ Check the power supply. Please see the Section 2.4
The LED lights up red and printing is interrupted.	 Check the software settings (driver settings) or command codes. Look for the error alert in the table in Section 3.3. Error Alerts. Check whether the print mechanism is closed correctly. Please see the Section 3.3
The label stock passes through the printer but no image is printed.	 Please make sure that the label stock is loaded the right side up and that it is the suitable material. Choose the correct printer driver. Choose the correct label stock and a suitable printing mode.
The label stock jams during printing.	Clear the paper jam. Remove any label material left on the thermal print head and clean the print head using a soft lint-free cloth dipped in alcohol. Please see the Section 6.1
There is no printed image on some parts of the label.	 Check whether there is any label material or ribbon stuck to the the print head. Check for errors in the application software. Check whether the starting position has been set correctly. Check the ribbon for wrinkles.
There is no printed image on part of the label or the image is blurred.	 Check the thermal print head for dust or other dirt. Use the internal "~T" command to check whether the thermal print head will carry out a complete print job. Check the quality of the print medium.
The printed image is positioned incorrectly.	 Check whether there is paper or dust covering the sensor. Check whether the label stock is suitable. Contact your supplier. Check the paper guide settings.
Skipping labels during printing.	 Check the label height setting. Check whether there is dust covering the sensor. Run the auto-detection function. Please see the Section 3.2
The printed image is blurred.	 Check the darkness setting. Check the thermal print head for dust or dirt. Please see the Section 6.1
The cutter does not cut off the labels in a straight line.	Check whether the label stock is positioned straight.
The cutter does not cut off the labels completely.	♦ Check whether the label is more than 0.2 mm thick.
When using the cutter, the labels are not fed through or cut off incorrectly.	 Check whether the cutter has been correctly installed. Check whether the paper guides are functioning correctly.
The label dispenser is not functioning normally.	 Check whether there is dust on the label dispenser. Check whether the label stock is positioned correctly.

Note

^{*} If any problems occur that are not described above, please contact your dealer.

	Nodel Name	ZX1200i	ZX1300i	ZX1600i		
P	rint Method	Thermal Transfer / Direct Thermal	·			
	Resolution	203 dpi (8 dots/mm)	300 dpi (12 dots/mm)	600 dpi (24 dots/mm)		
	Print Speed	Up to 10 IPS (254 mm/s)		Up to 3 IPS (76.2 mm/s)		
	Print Width	4.09" (104 mm) Up to (108mm)	4.09" (104 mm) Up to (105.7mm)	4.09" (104 mm)		
				Min. 0.16" (4 mm) ** - Max. 26" (6		
ı	Print Length	mm)		mm)		
	Processor	32-bit MPU	<u> </u>	<u> </u>		
	Flash	128 MB Flash (60 MB for user storage)				
Memory		· · · · · · · · · · · · · · · · · · ·				
	SDRAM	32 MB	anniani sa namana ladd alima and			
3	Sensor Type	Adjustable reflective sensor and trans		land all the second and a second accordance and		
	Type		nark sensing, and punched hole; label	length set by auto sensing or		
		programming				
		Tear: Min. 1" (25.4 mm) – Max. 4.64"	(118 mm)			
Media	Width	Cutter : Max. 4.61" (117 mm)				
Media		Dispenser / Rewind : Max. 4.64" (118 mm) Min. 0.003" (0.06 mm) – Max. 0.01" (0.25 mm)				
	Thickness					
	Label roll diameter	Max. 8" (203.2 mm)				
	Core diameter	Min. 1.5" (38.1 mm) - Max. 3" (76.2 mr	ml			
	Types	Wax, wax/resin, resin	···,			
	Length	Max. 1476' (450 m)				
Dikker			mml			
Ribbon	Width	Min. 1.18" (30 mm) – Max. 4.33" (110	mmj			
	Ribbon roll diameter	3" (76.2 mm)				
	Core diameter	1" (25.4 mm)				
Prin	nter Language	EZPL, GEPL, GZPL auto switch				
	Label design software	GoLabel (for EZPL only)				
Software	Driver	Windows XP, Vista, Win7, Win8, Server	r 2003 & 2008			
	DLL	Windows XP, Vista, Win7, Win6, 3erver Windows XP, Vista, Win7, Server 2003				
	DLL					
		6, 8, 10, 12, 14, 18, 24, 30, 16X26 and 0				
Resident Fonts	Bitmap Fonts		e, single characters 90°, 180°, 270° rotate	able		
itesiaeiii roilis		Bitmap fonts 8 times expandable in h	norizontal and vertical directions			
	Scalable Fonts	90°, 180°, 270° rotatable				
	Bitmap Fonts	Bitmap fonts 90°, 180°, 270° rotatable	e, single characters 90°, 180°, 270° rotate	able		
Download Fonts	Asian Fonts		and 8 times expandable in horizontal ar			
	Scalable Fonts	Scalable fonts 90°, 180°, 270° rotatab	<u> </u>			
	scalable rollis		on 2 & 5), UPC A / E (add on 2 & 5), I 2 c	of 5 8 1 2 of 5 with Shipping Rogran		
	100 0 1					
Barcodes	1-D Bar Codes		EAN 128, RPS 128, UCC 128, UCC / EAN	- 128 K-Mart, Random Weight, Post I		
		ITF 14, China Postal Code, HIBC, MSI,				
	2-D Bar Codes		ode, Maxicode, QR code, Micro QR co	de and Aztec code		
			57, 860, 861, 862, 863, 865, 866, 869, 737			
C	Code Pages	Windows 1250, 1251, 1252, 1253, 1254	4, 1255, 1257			
		Unicode (UTF8 \ UTF16)				
		Resident graphic file types are BMP of	and PCX, other graphic formats are dov	vnloadable from the software		
	Graphics		and a graphine reminer and are			
	Graphics					
	Graphics	• USB 2.0 (B-Type)				
	Graphics Interfaces	USB 2.0 (B-Type)Serial port: RS-232 (DB-9)	t port (P.1.45)			
		 USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 				
		USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the				
		USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD	front panel, 1 port at the rear panel			
	Interfaces	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green	front panel, 1 port at the rear panel color LED backlight			
		USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Rev	ady (Green); Error (Red)		
	Interfaces	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Rev	ady (Green); Error (Red)		
c	Interfaces	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Rev	ady (Green); Error (Red)		
c	Interfaces Control Panel	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C	Interfaces Control Panel al Time Clock Power	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
c	Interfaces Control Panel al Time Clock Power Operation temperature	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C)	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C)	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C Re- Environment	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F [-20°C to 60°C) 20-85%, non-condensing	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C Rec Environment Humidity	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C Rec Environment Humidity	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) FCC Class A CB CUL V	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C Rec Environment Humidity	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C Rec Environment Humidity	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage Ency Approvals Length	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) FCC Class A · CB · cUL · 18.30" (465 mm)	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage ency Approvals Length Height	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) · FCC Class A · CB · cUL · 18.30" (465 mm) 10.35" (263 mm)	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage ency Approvals Length Height Width	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) FCC Class A \ CB \ CUL \ 18.30" (465 mm) 10.35" (263 mm) 12" (305 mm)	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Re- I Z CCC \ GOST-R \ KC	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage ency Approvals Length Height	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) FCC Class A CB CUL CLASS (263 mm) 10.35" (263 mm) 10.35" (263 mm) 30 lbs (13.6 Kg), excluding consumate	front panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Re- I Z CCC \ GOST-R \ KC	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage ency Approvals Length Height Width	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) FCC Class A CB CUL 18.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 lbs (13.6 Kg), excluding consumate Cutter module	efront panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I Z CCC \ GOST-R \ KC	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage ency Approvals Length Height Width	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) FCC Class A CB CUL CL 18.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 lbs (13.6 Kg), excluding consumate Cutter module	efront panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red I Z CCC \ GOST-R \ KC	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage ency Approvals Length Height Width	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) · FCC Class A · CB · cUL · CB.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 lbs (13.6 Kg), excluding consumability cultiple of adaptor module (Centrol Bluetooth module)	ifront panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red z CCC \ GOST-R \ KC	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage ency Approvals Length Height Width	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) FCC Class A CB CUL CL 18.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 lbs (13.6 Kg), excluding consumate Cutter module	ifront panel, 1 port at the rear panel color LED backlight NCEL with dual color LED backlight: Red z CCC \ GOST-R \ KC	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage Ency Approvals Length Height Width Weight	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) · FCC Class A · CB · cUL · CB.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 lbs (13.6 Kg), excluding consumability cultiple of adaptor module (Centrol Bluetooth module)	color LED backlight NCEL with dual color LED backlight: Re- Z CCC \ GOST-R \ KC Classification KC Dies Conic female 36-pin)	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage ency Approvals Length Height Width	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) · FCC Class A · CB · cUL · 18.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 lbs (13.6 Kg), excluding consumate Cutter module Parallel port adaptor module (Centra Bluetooth module WiFi print server module (IEEE 802.11b)	color LED backlight NCEL with dual color LED backlight: Red CCC COST-R CC CCC GOST-R CC Color Semale 36-pin) O(g/n) 5-pin)	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage Ency Approvals Length Height Width Weight	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing CE (EMC) FCC Class A CB CUL 18.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 Ibs (13.6 Kg), excluding consumate Cutter module Parallel port adaptor module (Centra Bluetooth module WiFi print server module (IEEE 802.11b Applicator Interface (DSUB female 1) External label roll holder for 10" (250 r	color LED backlight NCEL with dual color LED backlight: Red CCC COST-R CC CCC GOST-R CC Color Semale 36-pin) O(g/n) 5-pin)	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage Ency Approvals Length Height Width Weight	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) · FCC Class A · CB · CUL · · · 18.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 lbs (13.6 Kg), excluding consumate Cutter module Parallel port adaptor module (Centra Bluetooth module Wifi print server module (IEEE 802.11b Applicator Interface (DSUB female 15 External label roll holder for 10" (250 r External label rewinder	color LED backlight NCEL with dual color LED backlight: Red Z CCC \ GOST-R \ KC CCC \ GOST-R \ KC Description of the color of the c	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage Ency Approvals Length Height Width Weight	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) · FCC Class A · CB · cUL · Class A · CB · cu	color LED backlight NCEL with dual color LED backlight: Re- Z CCC \ GOST-R \ KC Cles Color female 36-pin) 6-pin) mm) O.D. label rolls (factory install)	ady (Green); Error (Red)		
C Rec Environment Humidity Age	Interfaces Control Panel al Time Clock Power Operation temperature Storage temperature Operation Storage Ency Approvals Length Height Width Weight	USB 2.0 (B-Type) Serial port: RS-232 (DB-9) IEEE 802.3 10/100 Base-Tx Ethernet 3 USB Host (A-Type). 2 ports at the Backlight 3.2" touch screen LCD 1 Power on/off button with green 1 Control key: FEED / PAUSE / CA 1 Calibration button at rear pane Standard Auto Switching 100-240V AC, 50-60Hz 41°F to 104°F (5°C to 40°C) -4°F to 140°F (-20°C to 60°C) 20-85%, non-condensing 10-90%, non-condensing CE (EMC) · FCC Class A · CB · CUL · · · 18.30" (465 mm) 10.35" (263 mm) 12" (305 mm) 30 lbs (13.6 Kg), excluding consumate Cutter module Parallel port adaptor module (Centra Bluetooth module Wifi print server module (IEEE 802.11b Applicator Interface (DSUB female 15 External label roll holder for 10" (250 r External label rewinder	color LED backlight NCEL with dual color LED backlight: Re- Z CCC \ GOST-R \ KC Cles Color female 36-pin) 6-pin) mm) O.D. label rolls (factory install)	ady (Green); Error (Red)		

Notice

Specifications are subject to change without notice. All company and/or product names are trademarks and/or registered trademarks of their respective owners.

^{**} Minimum print height and maximum print speed specification compliance can be dependent on non variables such as label type, thickness, spacing, liner construction, etc. Godex is pleased to test non

Parallel port

Handshaking : DSTB is sent to the printer, BUSY to the host computer

Interface cable cable compatible with IBM computers

Pinout : See below

Pin No.	Function	Transmitter
1	/Strobe	Computer / printer
2-9	Data 0-7	Computer
10	/Acknowledge	Printer
11	Busy	Printer
12	/Paper empty	Printer
13	/Select	Printer
14	/Auto-Linefeed	Computer / printer
15	N/C	
16	Signal Gnd	
17	Chassis Gnd	
18	+5V, max 500mA	
19-30	Signal Gnd	Computer
31	/Initialize	Computer / printer
32	/Error	Printer
33	Signal Ground	
34-35	N/C	
36	/Select-in	Computer / printer

Serial Port

Default settings: Baud rate 9600, no parity, 8 data bits, 1 stop bit, XON/XOFF protocol and RTS/CTS

RS232 Housing (9-pin to	o 9-pin)		
DB9 Socket			DB9 Plug
-	1	1	+5V, max 500mA
RXD	2	2	TXD
TXD	3	3	RXD
DTR	4	4	N/C
GND	5	5	GND
DSR	6	6	RTS
RTS	7	7	CTS
CTS	8	8	RTS
RI	9	9	N/C
Computer			Printer

Notice

^{*} The total current to the serial port may not exceed 500mA.

ZX1200i/ZX1300i/ZX1600i USER MANUAL APPENDIX INTERFACE

USB Port

Computer Connector: Type A

VBUS

Pin NO.	1	2	3	4
Function	VBUS	D-	D+	GND
Connector Type: Type B				

GND

D+

• Ethernet (RJ-45)

Function

PIN NO.	FUNCTION
1	T+
2	T-
3	R+
4	N/C
5	N/C
6	R-
7	N/C
8	N/C

Applicator

PIN NO.	FUNCTION
1	GND
2	+5V,max 500mA
3	START_PNT
4	SLEW_LABEL
5	PAUSE
6	REPRINT
7	+24V,max 1.5A
8	GND
9	RIBBON_LOW
10	SERV_REQ
11	END_PRINT
12	MEDIA_OUT
13	RIBBON_OUT
14	DATA_READY
15	OPT_FAULT